

GREEN'S "Supreme" Lawn Mower.

INSTRUCTION LIST
AND LIST OF :: ::
DUPLICATE PARTS.



THOMAS GREEN & SON LIMITED,

*Smithfield Ironworks,
North Street,
Leeds.*



*New Surrey Works,
Southwark Street,
London, S.E. 1.*


TELEPHONES: LEEDS 20357
LONDON. HOP 2022
TELEGRAMS: "SMITHFIELD, LEEDS."
"SURREY WORKS, LONDON."

DUPLICATE PARTS FOR "Supreme" Lawn Mower.



- | | |
|--|--|
| <p>SA —DRUM (Right-Hand)
 SA 1—DRUM (Left-Hand)
 SB —CYLINDER
 SB 1—CYLINDER CUTTER
 SC —GRASS-BOX
 SD —CHAIN
 SE —CROSS STAY
 SE 1—DRAWING STAY
 SF —CATCH PLATE (Right-Hand)
 SF 1—CATCH PLATE (Left-Hand)
 SG —CATCH PAWL (Right-Hand)
 SG 1—CATCH PAWL (Left-Hand)
 SH —DRUM SCRAPER
 SI —FRONT ROLLER (Wood). (When ordering please give diameter of Shaft)
 SJ —FRONT ROLLER FIXING (Right-Hand)
 SJ 1—FRONT ROLLER FIXING (Left-Hand)
 SK —CHAIN WHEEL
 SK 1—PINION
 SL —BALL BEARING
 SM —WOOD HANDLE
 SM 1—SCREW PIN FOR WOOD HANDLE.
 SN —LUBRICATOR
 SN 1—BOTTOM BLADE
 SO —SCREW FOR CYLINDER HOUSING COVER
 SP —CYLINDER HOUSING
 SP 1—CYLINDER HOUSING COVER
 SP 2—BRIDGE BRACKET
 SQ —DRUM SHAFT COLLAR
 SR —TOP PART OF SIDE (Right-Hand)
 SR 1—TOP PART OF SIDE (Left-Hand)
 SS —HOUSING FOR DRUM-SHAFT (Left-Hand)
 SS 1—HOUSING FOR DRUM-SHAFT (Right-Hand)</p> | <p>ST —GRASS-BOX ARM (Right-Hand)
 ST 1—GRASS-BOX ARM (Left-Hand)
 SU —GRASS-BOX HANDLE (Right or Left-Hand)
 SV —SIDE RUNNERS (at ends of Wood Rollers)
 SW —FRONT ROLLER SHAFT. (When ordering please give diameter of Shaft)
 SX —LOCKING NUT FOR FRONT ROLLER FIXING
 SY —KEY FOR CHAIN WHEEL AND PINION
 SZ —CYLINDER PLATE. (State number of cutters in Cylinder)
 SZ 1—ADJUSTING SCREW FOR CYLINDER HOUSING
 SZ 2—SCREW FOR BRIDGE BRACKET
 SZ 3—BOLT AND NUT FOR DRUM-SHAFT HOUSING
 SZ 4—SCREW FOR CATCH PLATE
 SZ 5—SCREW FOR BOTTOM BLADE
 SZ 6—BOLT FOR FRONT ROLLER FIXINGS
 SZ 7—SCREW FOR DRUM SCRAPER
 SZ 8—SCREW FOR SOLEPLATE END
 SZ 9—$\frac{1}{2}$-in. NUT
 SZ 10—$\frac{7}{16}$-in. NUT
 SZ 11—BOLT AND NUT FOR CHAIN
 SZ 12—BOLT AND NUT FOR TOP PARTS OF SIDES
 SZ 13—DRAWING ROPE AND HANDLE
 SZ 14—SCREW KEY
 SZ 15—$\frac{1}{8}$-in. WASHER
 SZ 16—$\frac{3}{8}$-in. WASHER
 SZ 17—CYLINDER SHAFT
 SZ 18—DRUM SHAFT
 SLCC 1—BOTTOM PART OF SIDE (Right-Hand)
 SLCC 2—BOTTOM PART OF SIDE (Left-Hand)
 SLCC 3—SOLEPLATE
 SLCC 4—LOOSE CYLINDER COVER</p> |
|--|--|

INSTRUCTION LIST

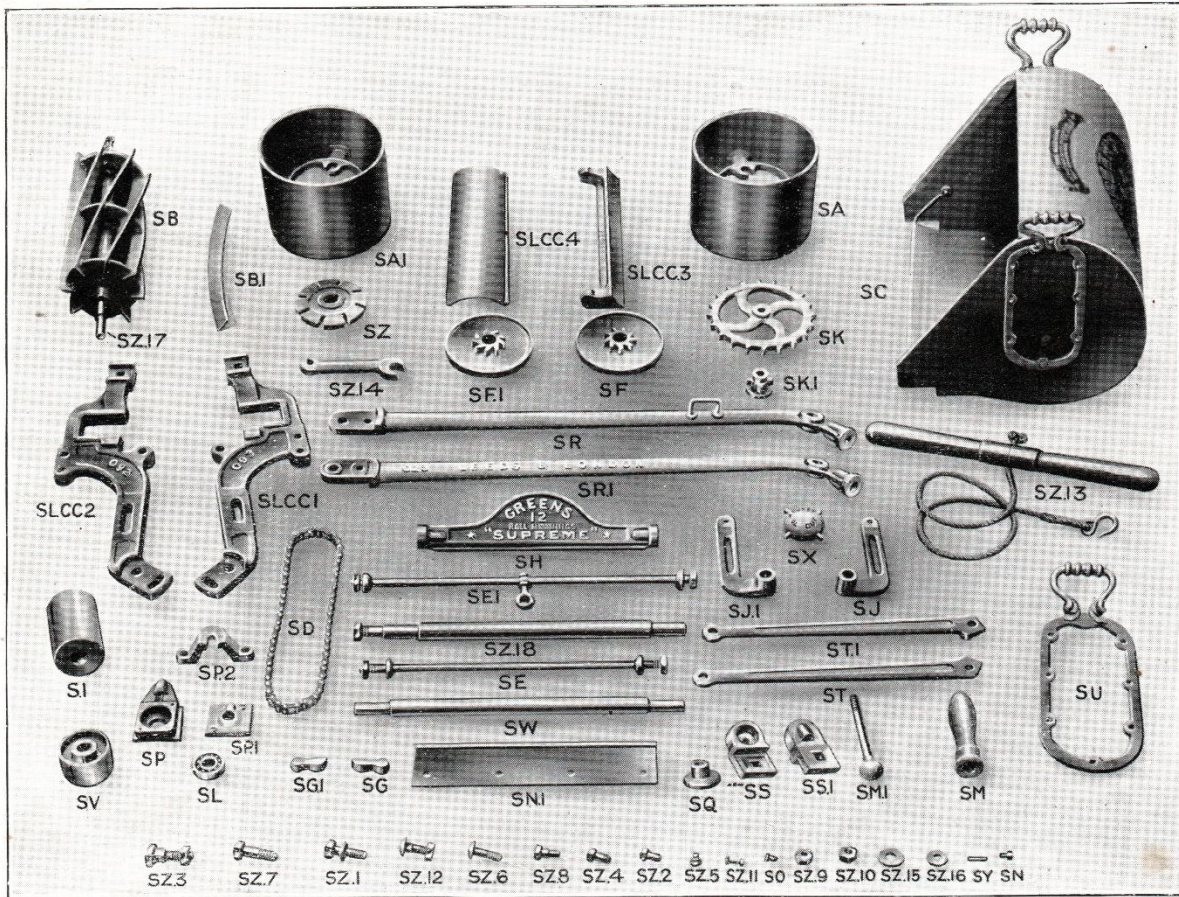

DIRECTIONS FOR USE.

If you require a soft velvety Lawn to walk upon and which will constantly keep green, work the front roller fixings at notch No. 3 from the top. If a closer cut is required for a Cricket Pitch or Tennis Lawn use notch No. 4. For Bowling and Putting Greens use notches Nos. 4 or 5.

- 1st.—These Machines, when sent out, have the cutters properly adjusted for mowing, and they should, in every instance, be first tried upon a lawn (seeing that it is clear from stones) before attempting any alterations.
 - 2nd.—The grass may be cut to any length desired by altering the front rollers marked **S1**, which run in the fixings marked **SJ** and **SJ1**: if desired to cut shorter, slacken the fixings **SJ** and **SJ1**, and raise them equally on both sides; if longer, lower them. These machines are now fitted with side runners, so that if it is desired to cut long grass, the wood rollers may be taken out, thus preventing the grass being pressed down.
 - 3rd.—The cylinder marked **SB** can be adjusted to the bottom blade marked **SN1** by altering the screw in centre of bridge bracket (marked **SP2**) on both sides. When the cutters are required to be placed closer to the bottom blade, tighten the screw, to raise it off slacken the screw. **When lightly adjusted on bottom blade, it should cut note-paper.**
 - 4th.—A little oil must be applied to the cutter edges before and after use.
 - 5th.—This machine is self-sharpening: the cutters are steeled on both sides, and when they become blunt with running in one direction the cylinder **SB** must be taken out and reversed, *i.e.* turned end for end. To do this take off the bridge brackets, which hold the cylinder adjusting screws, remove the chain, and the cylinder and its bearings can then be taken out.
(See instructions 3 and 7 for adjusting.)
 - 6th.—The height of the handles can be adjusted to suit the person using the Machine, by slackening the screws at the bottom of the Top Parts of Sides marked **SR** and **SRI**. When adjusted tighten the screws.
 - 7th.—If the chain or chains should by any means get slack turn the drum-scraper marked **SH** round, then slacken the screws in the drum-shaft housings marked **SS** and **SSI**, and draw the fixings back equally on both sides, taking care that the chain or chains are not made too tight. **N.B.—Keep the chains clean and well oiled.**
 - 8th.—The grass-box must never be allowed to overflow, otherwise the grass will fall amongst the cutters and clog the Machine.
 - 9th.—After using the Machine it must be thoroughly cleaned, and the parts which have been oiled must be well wiped to prevent accumulations. The best oil only should be used, as this will be found the cheapest in the long run.
 - 10th.—Should any part of the Machine get broken new parts can be had, and, in ordering them, please give the size, viz., length of cutters, number and name of the Machine, naming the part required: also whether it is for the right or left-hand side of the Machine when standing at the handles. A screw-key is sent with every Machine.
- N.B.—When ordering new parts from this List, kindly state "for 'Supreme' Chain-driven Mower as per your Instruction List."**

ALSO GIVE MARK ON CASTING

NOTE
SPECIALLY