


GREEN'S "Supreme" Lawn Mower.

INSTRUCTION LIST
AND LIST OF :: ::
DUPLICATE PARTS.

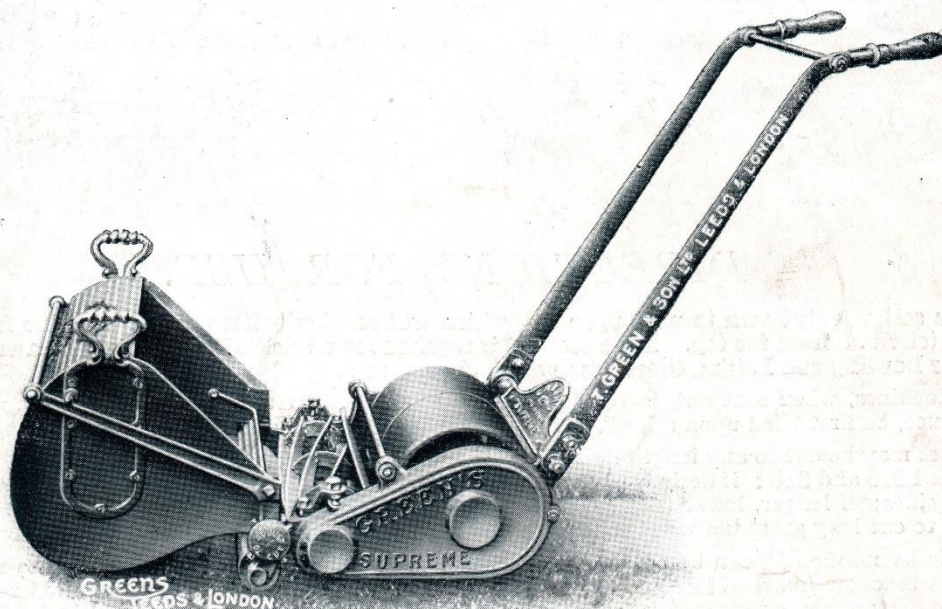

THOMAS GREEN & SON LIMITED

Smithfield Ironworks
North Street
Leeds



New Surrey Works
Southwark Street
London, S.E. 1

TELEPHONES: LEEDS 20357

LONDON, HOP 2022

TELEGRAMS "SMITHFIELD, LEEDS"


"SURREY WORKS, LONDON"

DUPLICATE PARTS FOR "Supreme" Lawn Mower.



- S 1—DRUM (Right-Hand)
- S 2—DRUM (Left-Hand)
- S 3—CYLINDER
- S 4—CYLINDER CUTTER
- S 5—GRASS-BOX
- S 6—CHAIN
- S 7—CROSS STAY
- S 8—STAY FOR GRASS-BOX FRAME
- S 9—CATCH PLATE (Right-Hand)
- S 10—CATCH PLATE (Left-Hand)
- S 11—CATCH PAWL (Right-Hand)
- S 12—CATCH PAWL (Left-Hand)
- S 13—DRUM SCRAPER
- S 14—FRONT ROLLER (Wood). When ordering please give diameter of Shaft)
- S 15—FRONT ROLLER FIXING (Right-Hand)
- S 16—FRONT ROLLER FIXING (Left-Hand)
- S 17—CHAIN WHEEL
- S 18—PINION
- S 19—WOOD HANDLE
- S 20—SCREW PIN FOR WOOD HANDLE
- S 21—BOTTOM BLADE
- S 22—SCREW FOR CYLINDER HOUSING COVER
- S 23—CYLINDER HOUSING (Right-Hand)
- S 24—CYLINDER HOUSING (Left-Hand)
- S 25—CYLINDER HOUSING COVER (Right-Hand)
- S 26—CYLINDER HOUSING COVER (Left-Hand)
- S 27—BRIDGE BRACKET (Right-Hand)
- S 28—BRIDGE BRACKET (Left-Hand)
- S 29—TOP PART OF SIDE (Right-Hand)
- S 30—TOP PART OF SIDE (Left-Hand)
- S 31—HOUSING FOR DRUM-SHAFT (Left-Hand)
- S 32—HOUSING FOR DRUM-SHAFT (Right-Hand)
- S 33—COVER FOR DRUM-SHAFT HOUSING (Right-Hand)
- S 34—COVER FOR DRUM-SHAFT HOUSING (Left-Hand)
- S 35—GRASS-BOX ARM (Right-Hand)
- S 36—GRASS-BOX ARM (Left-Hand)
- S 37—GRASS-BOX HANDLE (Right or Left-Hand)
- S 38—SIDE RUNNERS (at ends of Wood Rollers)
- S 39—FRONT ROLLER SHAFT. (When ordering please give diameter of Shaft)
- S 40—LOCKING NUT FOR FRONT ROLLER FIXING
- S 41—KEY FOR CHAIN WHEEL AND PINION
- S 42—CYLINDER PLATE. (State number of cutters in Cylinder)
- S 43—ADJUSTING SCREW FOR CYLINDER HOUSING
- S 44—SCREW FOR BRIDGE BRACKET
- S 45—BOLT AND NUT FOR DRUM-SHAFT HOUSING
- S 46—SCREW FOR CATCH PLATE
- S 47—SCREW FOR BOTTOM BLADE
- S 48—BOLT FOR FRONT ROLLER FIXINGS
- S 49—SCREW FOR DRUM SCRAPER
- S 50—SCREW FOR SOLEPLATE END
- S 51— $\frac{1}{2}$ -in. NUT
- S 52— $\frac{7}{16}$ -in. NUT
- S 53—BOLT AND NUT FOR CHAIN
- S 54—BOLT AND NUT FOR TOP PARTS OF SIDES
- S 55—GEAR-CASE COVER
- S 56—SCREW KEY
- S 57— $\frac{1}{2}$ -in. WASHER
- S 58— $\frac{3}{8}$ -in. WASHER
- S 59—CYLINDER SHAFT
- S 60—DRUM SHAFT
- S 61—BOTTOM PART OF SIDE (Right-Hand)
- S 62—BOTTOM PART OF SIDE (Left-Hand)
- S 63—SOLEPLATE
- S 64—LOOSE CYLINDER COVER
- S 65—BOLT AND NUT, $\frac{1}{4}$ -in. \times $2\frac{1}{4}$ -in., FOR GEAR COVER
- S 66—BOLT AND NUT, $\frac{1}{4}$ -in. \times $1\frac{3}{4}$ -in., FOR GEAR COVER
- S 67—SCREW FOR GRASS-BOX ARM
- S 68—PIN FOR END OF CYLINDER SHAFT
- S 69—LUBRICATOR FOR GEAR-CASE
- S 70—LUBRICATOR FOR HOUSINGS
- S 71—BALL BEARING

INSTRUCTION LIST.

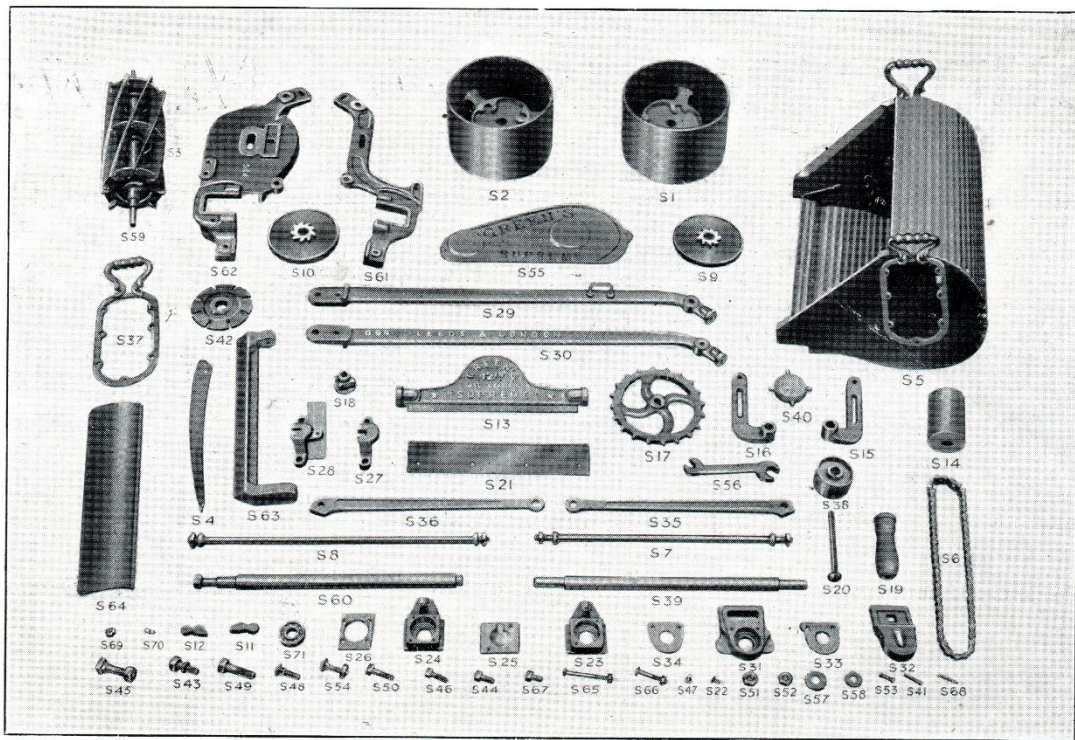

DIRECTIONS FOR USE.

If you require a soft, velvety Lawn to walk upon and which will constantly keep green, work the front roller fixings at notch No. 3 from the top. If a closer cut is required for a Cricket Pitch or Tennis Lawn use notch No. 4. For Bowling and Putting Greens use notches Nos. 4 or 5.

1st.—These Machines, when sent out, have the cutters properly adjusted for mowing, and they should, in every instance, be first tried upon a lawn (seeing that it is clear from stones) before attempting any alterations.

2nd.—The grass may be cut to any length desired by altering the front rollers marked **S14**, which run in the fixings marked **S15** and **S16**: if desired to cut shorter, slacken the fixings **S15** and **S16**, and raise them equally on both sides; if longer, lower them. These machines are now fitted with side runners, so that if it is desired to cut long grass the wood rollers may be taken out, thus preventing the grass being pressed down.

3rd.—The cylinder marked **S3** can be adjusted to the bottom blade marked **S21** by altering the screw in centre of bridge brackets (marked **S27** and **S28**) on both sides. When the cutters are required to be placed closer to the bottom blade tighten the screw, to raise it off slacken the screw. **When lightly adjusted on bottom blade it should cut notepaper.**

4th.—A little oil must be applied to the cutter edges before and after use.

5th.—The height of the handles can be adjusted to suit the person using the Machine by slackening the screws at the bottom of the Top Parts of Sides marked **S29** and **S30**. When adjusted tighten the screws.

6th.—If the chain should by any means get slack turn the drum-scraper marked **S13** round, then slacken the screws in the drum-shaft housings marked **S31** and **S32**, and draw the housings back equally on both sides, taking care that the chain is not made too tight. **N.B.—Keep the chain clean and well oiled.**

7th.—The grass-box must never be allowed to overflow, otherwise the grass will fall amongst the cutters and clog the Machine.

8th.—After using the Machine it must be thoroughly cleaned, and the parts which have been oiled must be well wiped to prevent accumulations. The best oil only should be used, as this will be found the cheapest in the long run.

9th.—Should any part of the Machine get broken new parts can be had, and, in ordering them, please give the size, viz., length of cutters, number and name of the Machine, naming the part required: also whether it is for the right or left-hand side of the Machine when standing at the handles. A screw-key is sent with every Machine.

N.B.—When ordering new parts from this List kindly state "for 'Supreme' Chain-driven Mower as per your Instruction List, 1929."

ALSO GIVE MARK ON CASTING.

Note
Specially